

# Product datasheet

Specifications



## base with integrated buzzer - white - 24 V - Ø 45

XVMC29B

### Main

Range of product	Harmony XVM
Product or component type	Base unit with cover
Kit composition	Base unit Cover
Component name	XVM
Indicator bank base type	Base with integrated buzzer
[Us] rated supply voltage	24 V

### Complementary

Mounting diameter	45 mm
Signalling type	Continuous or intermittent buzzer
Supply circuit type	AC/DC
Housing colour	White
Connections - terminals	Screw terminals, 1 x 0.325...1 x 1.5 mm <sup>2</sup>
Marking	CE
Current consumption	< 15 mA
Fundamental frequency	4 kHz
Net weight	0.065 kg

### Environment

Noise level	0...80 dB at 1 m
Standards	EN/IEC 60947-5-1 EN/IEC 60947-1
Product certifications	CCC
Ambient air temperature for storage	-25...70 °C
Ambient air temperature for operation	-10...50 °C
Electrical shock protection class	Class I aluminium tube mounting conforming to IEC 60947-1 Class I aluminium tube mounting conforming to IEC 60947-5-1 Class I aluminium tube mounting conforming to IEC 61140
IP degree of protection	IP40 any position except vertical position conforming to IEC 60529 IP42 vertical position conforming to IEC 60529

---

Protective treatment	TC
----------------------	----

## Packing Units

---

Unit Type of Package 1	PCE
------------------------	-----

---

Number of Units in Package 1	1
------------------------------	---

---

Package 1 Height	5.200 cm
------------------	----------

---

Package 1 Width	9.500 cm
-----------------	----------

---

Package 1 Length	9.900 cm
------------------	----------

---

Package 1 Weight	72.000 g
------------------	----------

---

Unit Type of Package 2	S01
------------------------	-----

---

Number of Units in Package 2	21
------------------------------	----

---

Package 2 Height	15.000 cm
------------------	-----------

---

Package 2 Width	15.000 cm
-----------------	-----------

---

Package 2 Length	40.000 cm
------------------	-----------

---

Package 2 Weight	1.782 kg
------------------	----------

## Offer Sustainability

---

Sustainable offer status	Green Premium product
--------------------------	-----------------------

---

REACH Regulation	<a href="#">REACH Declaration</a>
------------------	-----------------------------------

---

EU RoHS Directive	Pro-active compliance (Product out of EU RoHS legal scope) <a href="#">EU RoHS Declaration</a>
-------------------	---

---

Mercury free	Yes
--------------	-----

---

China RoHS Regulation	<a href="#">China RoHS declaration</a>
-----------------------	--

---

RoHS exemption information	<a href="#">Yes</a>
----------------------------	---------------------

---

Environmental Disclosure	<a href="#">Product Environmental Profile</a>
--------------------------	---

---

WEEE	The product must be disposed on European Union markets following specific waste collection and never end up in rubbish bins
------	---

## Contractual warranty


---

Warranty	18 months
----------	-----------

**Customer Assembled Tower Light**

**Dimensions**

Below drawing shows a tower light with 3 illuminated stages. Select the number of stages according to the product characteristics in order to get b dimension.

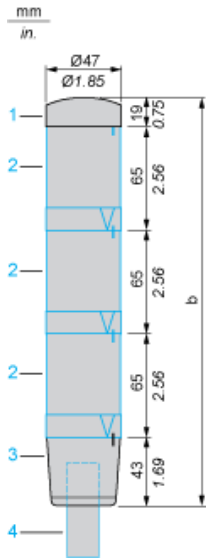


- (1) Cover (included with base unit)
- (2) Illuminated unit, to be ordered separately
- (3) Base unit
- (4) Fixing base XVMZ0\*/Z0\*T, to be ordered separately

Number of illuminated units (ref. 2)	b in mm	b in in.
1	127	5.00
2	192	7.56
3	257	10.12
4	322	12.68
5	387	15.24

Customer Assembled Tower Light

---

Wiring Diagram



**Indicator bank with buzzer (4 illuminated units max.):**

4: 4th illuminated unit

3: 3rd illuminated unit

2: 2nd illuminated unit

1: 1st illuminated unit

N: Common

B: Buzzer

**Indicator bank without buzzer:**

5: 5th illuminated unit

4: 4th illuminated unit

3: 3rd illuminated unit

2: 2nd illuminated unit

1: 1st illuminated unit

N: Common

**Maximum capacity for wiring through support tube:**


- 6 wires x 1 mm<sup>2</sup>/16 AWG,
- 5 wires x 1.5 mm<sup>2</sup>/14 AWG

## Base Unit with Integral Buzzer

---

### Adjustment of Audible Signal

View from above:

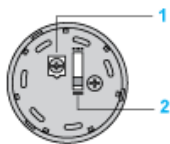

- (1) Volume adjustment potentiometer: 0 to 85 dB. Use either a cross headed or flat tipped screwdriver.
- (2) 2-position selector for type of audible signal: continuous tone or intermittent tone

### Recommended replacement(s)